


Amica

OPERATING
INSTRUCTIONS
EN

IO-WMS-0477
(03.2022/1)

AWDT814S

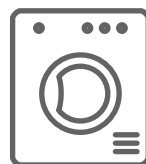

ONLY USE THE APPLIANCE WHEN YOU
HAVE READ AND UNDERSTAND THE
OPERATING
INSTRUCTIONS

WASHER-DRYER



CONTENTS

| | |
|--------------------------------|----|
| ECOLOGY IN PRACTICE | 3 |
| BASIC INFORMATION | 7 |
| SAFETY AND GERMENT CARE LABELS | 8 |
| INSTALL THE APPLIANCE | 20 |
| PRODUCT DESCRIPTION | 24 |
| TROUBLESHOOTING | 30 |
| PRACTICAL TIPS ON WASHING | 33 |
| BUILT-IN INSTALLATION | 37 |

ECOLOGY IN PRACTICE

For many years, Amica has consistently pursued pro-ecological policy. Concern for the environment is as important for us as the use of modern technology.

The development of technology has enabled our factories to become more environmentally friendly – we use less and less water, electricity and less waste water and solid waste is generated in the production.

A lot of attention is paid to materials used in production. We strive to use only those that do not contain harmful substances and make recycling and safe disposal possible after use.



UNPACKING



During transportation, protective packaging was used to protect the appliance against any damage. After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment.

All materials used for packaging the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

Important! Packaging materials (bags, polyethylene, polystyrene, etc.) should be kept away from children during unpacking.

DISPOSAL OF OLD APPLIANCE



In accordance with European Directive 2012/19/EU and local legislation regarding used electrical and electronic goods, this appliance is marked with the symbol of the crossed-out waste container. This marking indicates that the appliance must not be disposed of together with other household waste after it has been used.

The user is obliged to hand it over to waste collection centre collecting used electrical and electronic goods. The collectors, including local collection points, shops and local authority departments provide recycling schemes.

Proper handling of used electrical and electronic goods helps avoid environmental and health hazards resulting from the presence of dangerous components and the inappropriate storage and processing of such goods.

Dear customer!

Thank you for choosing an Amica product. For years we have delivered high-quality appliances, so that household chores become a real pleasure. Before being packaged and leaving the manufacturer, the appliance was thoroughly checked with regard to safety and functionality. We also endeavour to make sure that modern technology in Amica products always goes hand in hand with a unique design.

Before using the appliance, please carefully read these Operating Instructions. Follow these instructions to avoid improper use and ensure long and reliable operation of the appliance. Learn the principles of the safe use to avoid accidents.

Store these operating instructions in a safe place to use them for reference whenever needed. These Operating Instructions contain all the necessary information that will make the use of your Amica appliance simple and fun. We also encourage you to find out more about other Amica appliances.

We hope using your new appliance is a pleasure.

Amica

BASIC INFORMATION



This appliance is intended for domestic use only to wash/dry textiles and clothes designed to be machine washed in a detergent bath.

Before plugging the appliance into the mains, remove the safety packaging and ensure the machine is level. The manufacturer reserves the right to introduce changes, which do not affect operation of the appliance.

USAGE

- Carefully read the instructions below before using the appliance.
- Never use the appliance outdoors or anywhere the temperature may fall below freezing.
- The appliance should not be operated by children or anyone who has not read the instructions.



Temperatures below 0°C can damage the appliance! In the event of the appliance being stored or transported in sub-zero temperatures, it should be left to acclimatise in a temperature above 0°C for 8 hours before being used.

MANUFACTURER'S DECLARATION


The manufacturer hereby declares that this product meets the requirements of the following European directives:

- Low Voltage Directive, 2014/35/EU,
- Electromagnetic Compatibility (EMC) Directive 2014/30/EE,

and has been marked with the CE symbol and issued with a declaration of compliance made available to market regulators.

| | |
|----------------------|--|
| The risk of death! | <p>This appliance should not be used by children under 8 years of age, persons with reduced physical or mental capabilities, and persons who do not have sufficient skills to use this type of appliance. Such persons should be offered proper supervision or instructions on safe handling of appliance and related risks. Children must not play with the appliance or perform any maintenance-related activities. Children under 3 years of age must be kept away from the appliance unless continuously supervised.</p> |
| | <p>Children could get caught inside the appliance and get into a life-threatening situation.</p> |
| Risk of suffocation! | <p>If you allow children to play with the packaging/film or parts of the package, they can get entangled or put packaging over their head and risk suffocation. Keep packaging/plastic film or parts of packaging out of reach of children.</p> |
| Risk of poisoning! | <p>Washing detergents and fabric softeners can cause poisoning if ingested. In the event of accidental ingestion, consult your doctor. Washing detergents and fabric softeners should be stored out of the reach of children.</p> |

| | |
|---|---|
| Risk of burns! | If laundry is washed at high temperature, door glass becomes hot. Prevent children from touching the hot door. |
| Eye/skin irritation! | Contact with detergents and softeners may cause eye or skin irritation. In case of eye/skin contact, thoroughly rinse eyes/skin to remove fabric detergent/softener. Washing detergents and fabric softeners should be stored out of the reach of children. |
| Risk of electric shock. Risk of fire/damage to property/appliance! | If the appliance is not correctly installed, it may be dangerous. Make sure that: Mains voltage corresponds to the voltage indicated on the appliance nameplate (identification plate) The current load and required fuse protection are specified on the nameplate. The appliance is connected to AC source only through a properly installed and grounded wall socket in accordance with national standards. |

| | |
|---|---|
| <p>Risk of electric shock. Risk of fire/damage to property/appliance!</p> | <p>The power cord and the grounded wall socket fit together and the grounding system has been properly installed.</p> |
| | <p>Power cord cross section is sufficient.</p> |
| | <p>Power plug is always accessible.</p> |
| | <p>If a miniature circuit-breaker is used, always use a circuit-breaker with the following designation:  This symbol is the only way to make sure that all the necessary requirements have been met.</p> |
| <p>Risk of electric shock. Risk of fire/damage to property/appliance!</p> | <p>If the power cord is modified or damaged, it may result in electric shock, short circuit or fire due to overheating.</p> <p>The power cord must not be kinked, crushed or modified or come in contact with any heat source.</p> |

| | |
|---|---|
| Risk of fire/damage to property/appliance! | The use of extension cords or splitters may result in fire due to overheating or short circuit. Connect the appliance directly to a properly grounded wall socket. Do not use extension cords, splitters or power strips. |
| Health risk / risk of damage to property/appliance! | The appliance may vibrate or displace while in use, potentially causing injury or property damage. Set the appliance on a clean, level and hard surface using a level spirit. |
| | If any protruding items are caught by the appliance (e.g. doors) when trying to lift or move it, the item may come off and cause injury. Do not grasp any protruding parts of the appliance to move it. |
| Risk of injury! | The appliance is very heavy. Lifting may cause injury. Do not lift this appliance by yourself. |

| | |
|--|--|
| Risk of injury! | <p>This appliance has sharp edges that can cause a hand injury. Do not hold the appliance by sharp edges. Only lift the appliance after you put on the gloves.</p> |
| | <p>If the hoses or electrical cables are not routed properly, you can trip and sustain an injury. Rout hoses and cables so that they do not constitute a tripping hazard.</p> |
| Important! Damage to property/ appliance | <p>If the water level is too high or too low, the appliance may not work properly, which can cause damage to property/appliance. Make sure that water is supplied under pressure of minimum 100 kPa (1 bar) and not exceeding 1000 kPa (10 bar).</p> |
| | <p>If the water supplying hoses have been modified or damaged, this can cause damage to property/appliance. The water supply hoses must not be kinked, crushed, modified or cut.</p> |
| | <p>The use of third-party hoses to connect the appliance to water supply can cause damage to property or the appliance.</p> |

| | |
|---|--|
| <p>Important! Damage to property/ appliance</p> | <p>Use only hoses supplied with the appliance, or the original hoses up designed for the appliance.</p> <p>The appliance is secured for transport with transit bolts. If you don't remove transit bolts before using the appliance, the appliance may be damaged. Remove all transit bolts before using the appliance for the first time.</p> <p>Make sure you keep transit bolts in a safe place for future use. If the appliance will be transported, to avoid any damage, you must reinstall the transit bolts.</p> |
| <p>Risk of explosion/fire hazard!</p> | <p>Laundry washed with detergents that contain solvents and thinners pose a risk of explosion in the drum.</p> <p>Thoroughly rinse laundry with water before washing in the washing machine.</p> |

| | |
|--------------------|---|
| Risk of poisoning! | <p>Cleaning agents containing solvents may give off poisonous vapours.</p> <p>Do not use cleaning agents containing solvents.</p> |
| Risk of injury! | <p>Do not lean against/sit on open appliance door as this can lead to the appliance tipping over. Do not lean against the open door of the appliance.</p> |
| | <p>Climbing on the appliance may cause the worktop to break or collapse and lead to an injury Do not climb on the appliance.</p> |
| | <p>Reaching into the drum while is still rotates could injure your hand. Wait until the drum has come to a standstill.</p> |
| Risk of scalding! | <p>When washing at high temperature, there is a risk of scalding as a result of contact with hot water and detergent (e.g. when you drain the water into the sink). Do not put your hands in hot water with detergent solution.</p> |

| | |
|--|--|
| Eye/skin irritation! | <p>Fabric detergents and softeners may splash, if the detergent drawer remains open during operation.</p> <p>In case of eye/skin contact, thoroughly rinse eyes/skin to remove fabric detergent/softener.</p> <p>In the event of accidental ingestion, consult your doctor.</p> |
| Important! Damage to property/ appliance | <p>If the amount of laundry in the washing machine exceeds the maximum load, it may not operate properly or cause damage to property or the appliance.</p> <p>Do not exceed the maximum load capacity of dry laundry.</p> <p>Do not exceed the maximum load capacity for individual wash programmes.</p> |
| | <p>Adding too much detergent or fabric softener may cause damage to property or the appliance.</p> <p>Use fabric detergent/softener according to the manufacturer's instructions.</p> |

The risk of death!!

The appliance is powered by electricity. Touching live elements poses a risk of electric shock. Therefore, remember:

Turn off the appliance:
Unplug the appliance from the wall outlet.

We never grab the plug with wet hands.

When pulling the plug, always hold the plug, not the power cord, because this can damage the power cord.

Do not make any technical modifications to the appliance or its components.

 
 

















Any repairs or other work on the appliance must only be performed by our service facility or by an electrician. The same applies to replacing the power cord (if necessary).

You can order a spare power cord in our service centres.

| | |
|---|---|
| <p>Risk of poisoning!</p> | <p>Cleaning agents containing solvents may give off poisonous vapours.</p> <p>Do not use cleaning agents containing solvents.</p> |
| <p>Risk of electric shock / damage to property / appliance!</p> | <p>If water penetrates into the appliance, it may cause a short circuit.</p> <p>Never use pressure washer or steam cleaner to clean the appliance.</p> |
| <p>Health risk / risk of damage to property/appliance!</p> | <p>The use of third-party spare parts and accessories is dangerous and may cause injury, damage to property or appliance.</p> <p>For safety reasons, use original spare parts only.</p> |
| <p>Important! Damage to property/ appliance</p> | <p>Fabric cleaners, impregnating agents, stain removers, pre-wash agents, etc. may damage the appliance outer surface.</p> <p>Therefore, remember:</p> |

| | |
|---|---|
| Important! Damage to property/ appliance | Make sure there is no contact with the appliance surface. |
| | Clean the appliance with a damp cloth only. |
| Dry | Do not dry clothes that have not been washed. |
| | Do not dry chemically washed garments or clothing, where stains were removed by chemicals. |
| | Do not dry clothes soiled with substances such as cooking oil, crude oil, acetone, alcohol, petrol, kerosene, stain removers, turpentine, wax. |
| | Before loading the clothes into the dryer, remove such contamination in hot water, using a large amount of washing detergent. |
| | Do not dry articles made of rubber foam, latex, water-resistant fabrics, raincoats, rubber mats, thermally formed products, clothing or pillows padded with foam rubber, as they may melt and damage other items or even damage the appliance. Please carefully read these operating instruction before installing the appliance. Damage caused by improper connections or use of the appliance is not covered by the warranty. |
| | NOTE: There is a cooling phase at the end of the drying cycle. Therefore, do not turn off the appliance before the end of the drying cycle. Otherwise, quickly remove and hang clothes to cool. |

UNDERSTANDING THE SYMBOLS ON CLOTHES LABELS

| | | | | |
|-------------------|---|---|---|--|
| Washing |  |  |  |  |
| | boil at 90°C | normal wash at 60°C | normal wash at 40°C | Do NOT wash! |
| |  |  |  | |
| | delicate | | handwash | |
| Chemical cleaning |  |  |  |  |
| | all solvents | all except TRI | petrol only | NO Dry clean! |
| Tumble dryer |  |  |  |  |
| | normal | low | high | Do NOT dry! |
| Ironing |  |  |  |  |
| | 110°C | 150°C | 200°C | Do NOT Iron |





Always pay attention to the symbols on garment labels when choosing a washing programme.

INSTALL THE APPLIANCE

1

Remove the transit bolts
(keep the bolts for future use, e.g. when moving house).

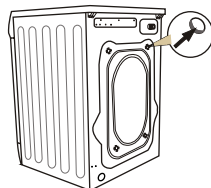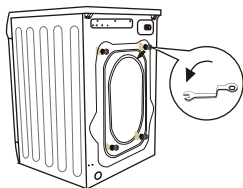

- unscrew the 4 transit bolts with a spanner,
- remove the rubber and plastic transport brackets from the sockets along with the washers and bolts.
- stop up the holes with the stoppers enclosed in the accessories bag.





Caution: the transit bolts **MUST** be removed before the appliance is used!

2

Position and level the appliance

- place the appliance on a solid, level surface,
- Level the appliance by adjusting the legs (1)

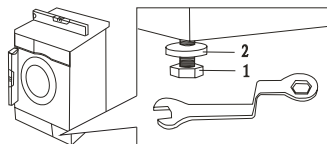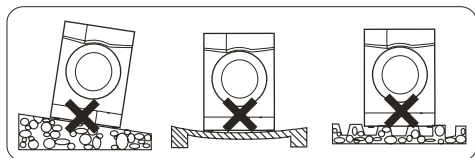


After positioning and levelling the appliance, check that it is stable by pressing down each corner and ensuring it does not move!

3

Connect the water supply

- Use only the new hoses supplied with the machine. Do not re-use hoses.

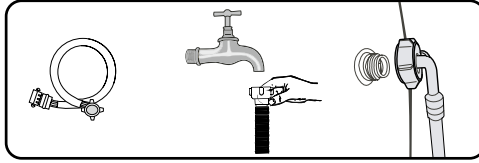

- A supply hose with seals is inside the drum of the machine.
Water pressure min 0.05 MPa (0.5 bar), max 1 MPa (10 bar).

- 1). after connecting, make sure the hose is not twisted
- 2) after connecting the hose and the valve, check they are sealed tight
- 3). regularly check the condition of the hose.




Supply the machine with cold water only.

4



Water drain

- The drain hose is at the back of the machine. Fix the drain hose so that it does not move while the appliance is in operation. If necessary, use the elbow (1).

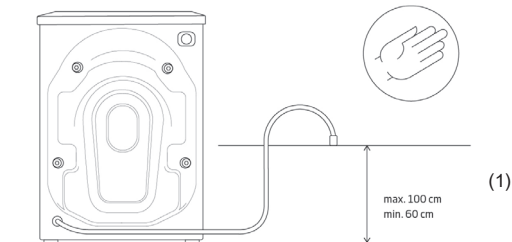


Connection on the left

Connection on the right

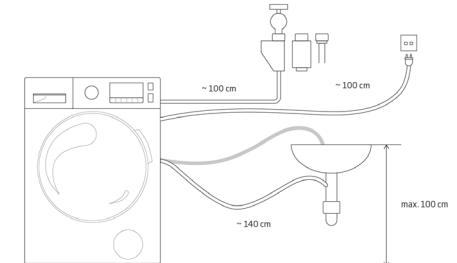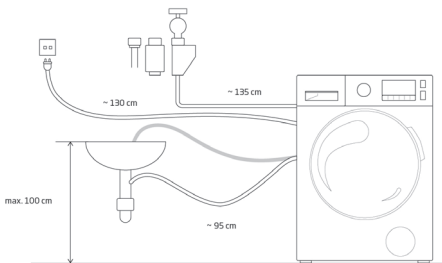

Connect to power supply

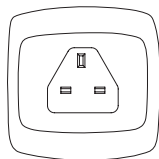

- Electrical wall outlet where the appliance is connects must be in a visible and accessible place,
- Only plug the appliance into a properly installed socket with an earthing pin,
- Do not use an extension cord to connect the appliance,
- in the event of the power cord being damaged, it must be replaced by an authorised service technician,
- the electrical system to which the appliance is to be connected must be protected with a 10 A fuse.

Prepare to wash:

- Small items such as coins, paper clips, needles, etc., may damage the laundry and the appliance, you should therefore follow a few important recommendations:
 - 1). Empty pockets
 - 2). Remove all metal items
 - 3.) Delicate items such as bras or stockings should be washed in protective mesh laundry bag
 - 4). Close zippers and fasten buttons
 - 5). removing foreign objects from the appliance (e.g. wires, whalebones).


FEATURES AND COMPONENTS

DESCRIPTION OF THE APPLIANCE



1. Detergent drawer
2. Drum
3. Control Panel
4. Door handle
5. Pump filter cover

Accessories:

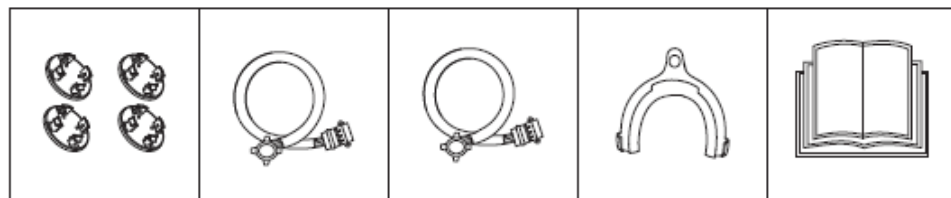

Transport
hole plug



Supply hose
cold water

Supply hose
hot water
(optional)

Drain hose
support
(optional)

Owner's
manual

DISPLAY AND CONTROL PANEL

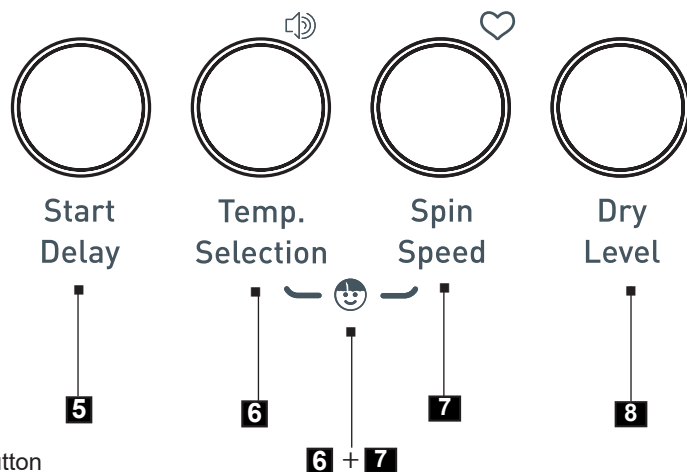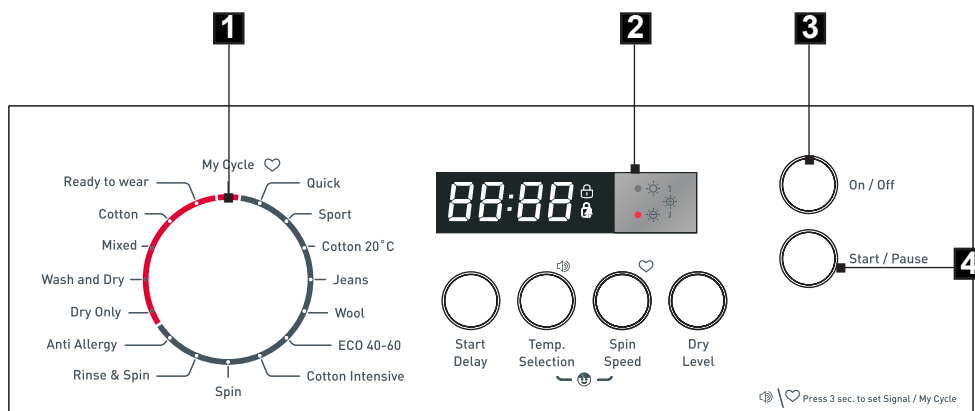

1. Programme button
2. Display
3. **On/Off** button
4. **START/PAUSE**
5. Button for the additional function **Start delay**
6. Button for the selection of the **Temperature**
7. Button for the selection of the **Spin speed**
8. Button for the selection of the **Dry Level**
- 6+7. Child safety lock

1

Programme selector dial

- Choose the appropriate wash, dry or combined wash-dry programme as required, depending on the soil level, and type and amount of laundry loaded, which ensures better results and more effective washing. Once the drying programme is started, turning the programme selector knob to another position is possible, however it does not change the previously selected programme.

2

Display

- Time, temperature, spin speed and delay start are available on display. Additional function indicators are displayed such as drying levels and Start/Pause.
- The remaining time is displayed during wash cycle. Time displayed is an estimate only. It can differ from the actual washing time depending on temperature, water pressure, quantity of laundry loaded, and quantity of washing powder used. The time is automatically updated during the wash cycle and it is normal for it to stop or skip.
- Child Lock

3

Standby button

- Switch the washing on/off and abort the wash programme.

4

Start/Pause button

- Use the **4** Start/Pause button to start or interrupt the wash programme. When the washing machine is in operation, the symbols “■” on the display blink. In the pause mode, the symbols “■” do not blink but are lit continuously. The pause function can be used to soak the laundry. After starting the selected programme, wait about 10 minutes and then push the Start/Pause ▶|| button. After the laundry has soaked for the required time, again push the Start/Pause ▶|| button and the washing machine will continue the wash programme. Soaking improves the washing results when the laundry is very soiled.

5

Start delay button

- This function delays programme start by 0 to 24 hours Set the Delay Start function:
 1. Select a programme;
 2. Press the Delay start button and select time;
 3. Press Start/Pauses to activate the Delay Start function.

Cancel the Delayed Start Press the Delay Start button repeatedly until 0h is displayed. Press the button before you start the programme. If the programme has already started, press On/Off.

Notes: In the event of a power failure while the appliance is operating, the programme is memorised by the appliance and will continue when power is restored and you press the Start/Pause button.

6

Temperature selection button

- The button **6** serves to set the temperature for the respective washing programmes.

When pushing the button **6**, the display shows the available water temperature settings or cold water options (without preheating) for the relevant wash programme. Depending on the selected wash programme, the display shows the following setting options: - °C (cold) - 20°C - 30°C - 40°C - 60°C - 90°C.

7

Spin speed button

- Button **7** serves to set the spin speed during the pumping cycle. Push the button in order to change the setting. Depending on the selected wash programme, the display shows the following values - 0 (no spin) - 400 - 600 - 800 - 1000 - 1200 - 1400.

8

Dry Level

- Press the Dry Level button to select the fabrics drying intensity: Extra Dry/Normal Dry/ Gentle Dry.






- Extra Dry: Select this function to wear the garment immediately after drying.



- Normal Dry: Normal drying cycle.



- Gentle Dry: Dry fabric when removed from the dryer.

| | |
|---|------------|
|  | Gentle Dry |
|  | Normal Dry |
|  | Extra Dry |

6+7 Child lock

- The child lock blocks the function buttons, so that children cannot inadvertently change the settings. In order to activate the child lock during the washing, push the buttons **6** (Temperature selection) and **7** (Spin speed) simultaneously and hold them for about 3 seconds. In order to deactivate this function during the wash cycle, again push the same buttons and hold them for about 3 seconds.

Note 1: When the child lock is activated, the display shows the symbol .

Note 2: The lock is not automatically deactivated at the end of the wash programme.

Switching the sound signal on/off

- In order to activate this function, keep the button **6** pressed for about 3 seconds. The sound signal confirms the activation of this function. In order to re-enable the function, push the button **6** and hold it for about 3 seconds. This setting remains saved until the next change.

Setting of the programme Individual

- In order to set the programme Individual, turn the selector dial to any of the wash programmes and select the temperature, spin speed and additional functions. Keep the button **7** pressed for about 3 seconds to confirm the settings of the programme Individual. The default wash programme is cotton.

Remove excess foam

- Detect excess foam: Excess foam forms when too much detergent is used, which makes washing and rinsing less effective. The appliance automatically detects and removes excess foam.

Wash programme Anti-Allergy:

- This wash programme is intended for children and persons with sensitive skin. The main wash is always at 60°C (possible temperatur settings are 90/60/40/30/20—"cold").

Wash programme Mixed:

- Standard wash programme at a standard temperature of 40°C with a standard spin speed of 1000 rotations/minute. This wash programme can be used to wash coloureds, cotton, synthetics and linen at the same time.

Wash programme Quick:

- These wash programmes serve to refreshen clothes. They include all the wash cycles:
 - main wash
 - rinse
 - spin

Cotton:

- This wash programme serves for washing at the temperature of 20°C.

Cotton 20:

- Washing colored clothes can preserve colors better.

ECO 40-60:

- The "Eco 40-60" program is used to wash normally soiled cotton items together, which can be washed at 40 ° C or 60 ° C on the same cycle.

USING THE APPLIANCE

1

Select Programme

- Set the programme selector turning it left or right.
- Customize the programme to your needs – you can change the temperature, spin speed, or enable additional features.
- Press the Start/ Pause button.

2

Time Remaining

To set the Time Remaining:

- Close the appliance door.
- Set the programme selector dial to the desired programme (see table).
- Select additional functions or wash cycle parameters as required – depending on the needs,
- Press the Time Remaining button.
- Select time remaining ranging from 0 to 24 hours.
- Press the Start/ Pause button The appliance will be set in delay mode.
- The wash programme will be automatically terminated.



When you set the Time Remaining option, the display will show the time remaining to the end of the programme.

3

End of the wash cycle

- The end of the wash programme is indicated by “End” in the display and a sound signal (if this function is active).
- Close the water valve.
- Switch the washing machine off with the Standby button.
- Disconnect the washing machine from the power supply.
- Open the door and remove laundry.

4

Aborting and changing the wash programme

- In order to abort a wash programme, push the Standby button. Then switch the washing machine on again, select the required wash programme and push the Start/Pause ►|| button.

5

Display energy-saving mode

- About 10 minutes after the end of the wash programme, the display switches to the energy-saving mode (instead of “End”, “■” now blink in the display). The energy-saving mode remains active also, if within 10 minutes after the washing machine was switched on with the Standby button, the selector dial is not turned and no button is pushed.

TROUBLESHOOTING

| Problem | Probable cause/Solution |
|-------------------------------------|---|
| Washer dryer cannot start up | Door is not closed properly - restart after the door is closed - check if the clothes is stuck |
| Door can't be opened | Washer's safety protection design is working - disconnect the power, restart the product |
| Water leakage | The connection between inlet pipe or outlet hose is not tight - check and fasten water pipes - clean up outlet hose |
| Detergent residues in the box | Detergent is dampened or agglomerated - clean and wipe the detergent box |
| Indicator or display does not light | Disconnect the power PC board or harness has connection problem - Check if the power is shut down and the power plug is connected correctly |
| Abnormal noise | - check if the fixing (bolts) have been removed - check it's installed on a solid and level floor |

THE FAULT INDICATOR LIGHTS

The washing machine has an alarm system, which helps solving minor problems connected with incorrect operation by means of "ERROR CODES" indicated in the display. With the ERROR CODES you can locate the defect and establish the cause.

If an error is found, the display shows information in accordance with the following table:

| Display indication | Reason | Explanation |
|--------------------|---------------------------------------|--|
| E10 | Water injecting problem while washing | Check if the water pressure is too low Straighten the water pipe Check if the inlet valve filter is blocked |
| E12 | Water overflow | Restart the washer. |
| E21 | Overtime water draining | Check if the drain hose is blocked |
| E30 | The door is not closed. | Check, if the door of the washing machine is closed. Check, if no clothing is stuck in the door of the washing machine. |
| Others | | Try to restart or contact the SERVICE CENTRE. |



For the UK: please call
01949 862012

For Ireland: please call
0818 46 46 46 (non-geographic number)
or **01 88 2010** (standard rate call)



While signaling an error washing machine also beeps (if active).

MAINTENANCE AND CLEANING






Never clean the appliance body or plastic parts using solvents or harsh, abrasive detergents (e.g. washing powders or creams)! Use mild liquid detergents and soft cloths only. Do not use sponges.

1

Clean the pump filter

- Clean the pump filter every 20 washes or so. Neglecting to clean the filter may result in problems with draining water from the appliance!

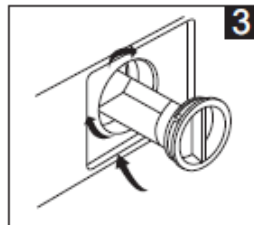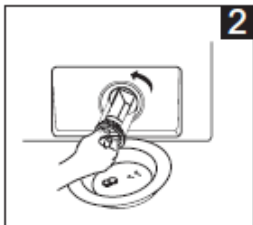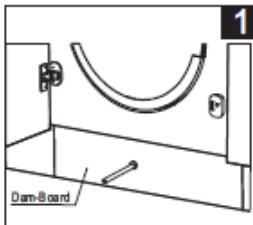

- 1). after the power is disconnected, pull out the dam-board.
- 2). turn the filter down as shown with the figure and take out sundries matters.
- 3). reinstall each part back after sundries matters are removed.



2

Clean the water supply valve

- Replace the filter following the procedure in reverse order.

Washing the filter in the tap

1. Close the tap.
2. Remove the water supply hose from the tap.
3. Clean the filter.
4. Reconnect the water supply hose.

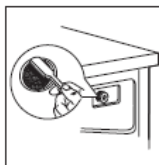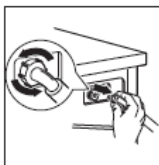



Washing the filter in washer dryer:

1. Screw off the inlet pipe from the backside of the machine.
2. Pull out the filter with long nose pliers and reinstall it back after being washed.
3. Use the brush to clean the filter.
4. Reconnect the inlet pipe.

3

Clean the detergent drawer

- Should be cleaned at least once a month.

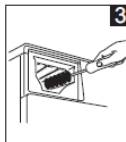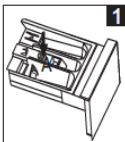

- 1). pull out the dispenser drawer with press the A.
- 2). clean the dispenser drawer under water.
- 3). clean inside the recess with an old toothbrush.
- 4). insert the dispenser drawer

PRACTICAL TIPS ON WASHING

DETERGENTS AND LAUNDRY ADDITIVES



It is recommended to use a general-purpose laundry detergent powder or liquid for the full range of temperatures according to the manufacturer's instructions on the detergent packaging.

1

Detergents

- Pour the detergent into the drawer compartment marked
- Pour the pre-wash detergent into the drawer compartment marked

2

Liquid detergents

- Install the tab supplied in the compartment
- Pour liquid detergent into the drawer compartment marked

3

Fabric softeners added to the rinse

- Pour the fabric softener into the drawer compartment marked
- Do not exceed the maximum level marked on the drawer compartment. This detergent will be used for the final rinse.



For washing whites it is recommended to use the washing powder. Liquid detergents do not contain bleach. Do not use rinse aid with white laundry, as this may cause yellowing of laundry.

FIRST WASH

- Before washing for the first time, put the appliance through one high temperature cycle without a load, according to the following procedure:
 - 1). connect the appliance to the power supply,
 - 2). open the water valve,
 - 3). set the programme selector dial to washing at high temperature, add a suitable detergent and press Start/Pause.

SOIL

1

Stubborn stains

- Before washing underwear, apply an additional stain remover according to the instructions for use.

2

Heavy soil

- in order to achieve a better result, wash less laundry,
- add more detergent.
- rinse the appliance after washing heavily soiled garments (e.g. work clothes) or clothing that loses fibres. To do this, run the wash cycle at 60°C, for example coloureds or easy-care.

3

Light soil

- See Conservation.

CONSERVATION

Reduce energy and water consumption

- Garments which are only lightly soiled should be washed on the Quick setting.
- For most programmes, the appliance detects load.
For partial load, when using the QUICK programme, the appliance will reduce water and energy consumption and shorten the wash cycle.
- The most energy and water efficient wash programmes are generally those that run at lower temperature and for a long time.
- Loading the washing machine to the full capacity indicated by the manufacturer for the respective wash programmes will save energy and water.

WATER HARDNESS

- Hard water causes scale deposition. Information about water hardness is available from the nearest water works. We recommend that you use water softener for each washing.

POWER OUTAGE (PROGRAMME MEMORY)

- Power outage or unplugging the appliance does not cancel the set programme. The programme is memorised and resumes when power is restored. Do not open the appliance doors during a power outage.

LOAD

- Maximum drum capacity (washing) 8 kg.
- Maximum drum capacity (drying) 6 kg.
- Load the laundry into the drum according to the following instructions:
 - 1). cotton, denim, children's clothes – max full drum (do not force clothes into the drum as this will reduce the quality of the wash),
 - 2). synthetics – max ½ of the drum,
 - 3). wool, silk, delicate fabrics – 1/3 of the drum.



Do not overload the appliance. Overloading the appliance may damage the clothes being washed! If you overload the appliance the OVL is shown appears on the display — remove excess laundry from the drum and restart the appliance. The maximum load amounts depending on the programme are given in table of programmes.

LOAD DISTRIBUTION CONTROL

- The appliance features load distribution control system. Before spinning, this checks the distribution of clothes inside the drum. In the event that too great an imbalance is detected, the system makes several attempts to rearrange the clothes inside the appliance. Sometimes these attempts to distribute the load are not successful. Problems may be caused by terrycloth robes washed together with other types of laundry, such as bed sheets that formed a bundle around other items of laundry.
- The system may then respond in two ways:
 - 1). accept the uneven distribution of garments and reduce spin speed,
 - 2). cancel the spinning.In either case, after washing cycle is finished open the appliance door, remove the laundry by hand, close the door and select the spin setting again.

DOOR LOCK

- The appliance is equipped with a lock which prevents the door from being opened during wash cycle. Once a wash cycle is complete, the door lock is automatically released. In order to open the door during the wash program, press PAUSE button and wait to unlock the door.



If the temperature inside the drum is high, the door may remain blocked until the water temperature has dropped below 60°C.



Before opening the door of the washing machine check whether there is water in the drum.

DELICATE FABRICS

1

Select Programme

- Select the appropriate wash programme: Synthetics, Wool.

2

Load

- Avoid overloading the appliance — the maximum load is 1/3 kg for delicate fabrics, see "Loading."

ADD DETERGENT

1

Not enough detergent

- the laundry turns grey, lumps of fat form, lime scale is deposited.

2

Too much detergent

- A lot of foam, ineffective washing, detergent incompletely rinsed from fabrics.

BUILT-IN INSTALLATION

 
 
Appendix

Self-tapping screws
(ST4*12)




Self-tapping screws
(M5*12)

Hinges



Counter magnet

 
Spacer



Fixed position
paper

Tool


Screw driver

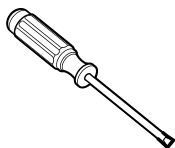


Automatic driver




Ruler

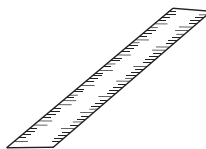


Pencil

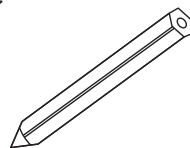


Install steps

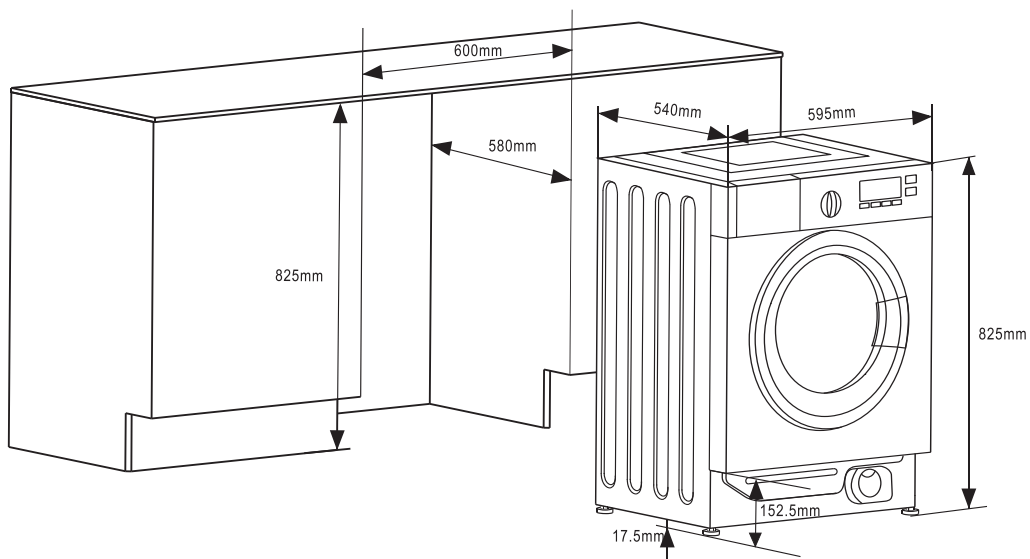

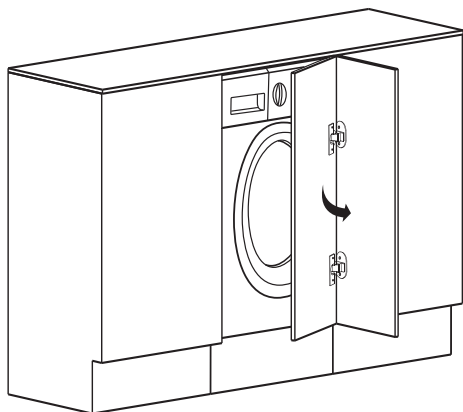


The door is open from left to right

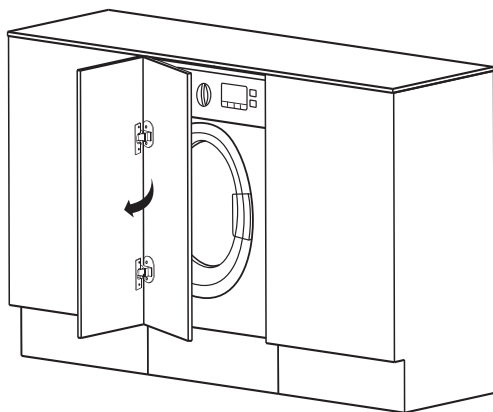

The door is open from right to left




Preparation and assembly of the door.

1

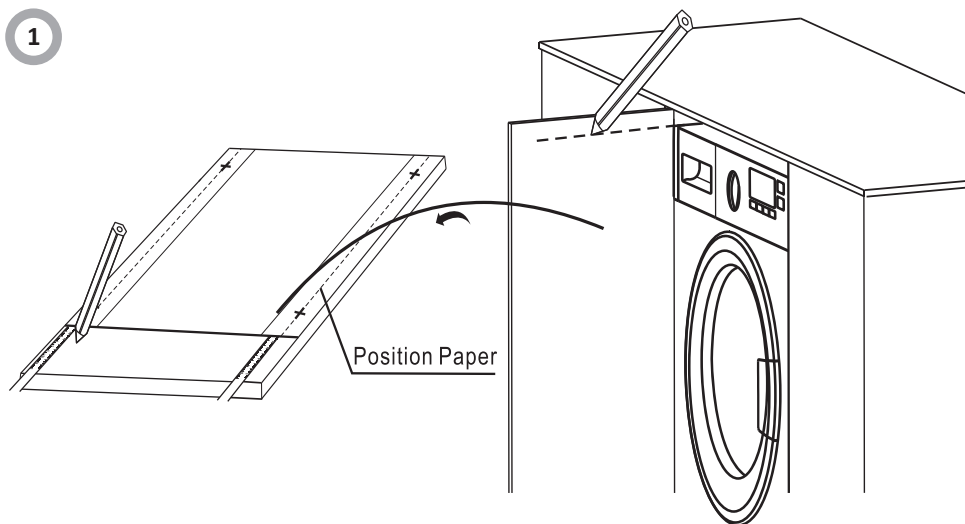


Make the mark on the door.

2

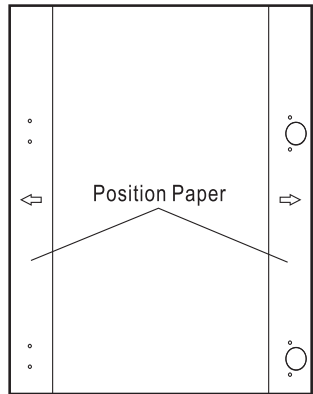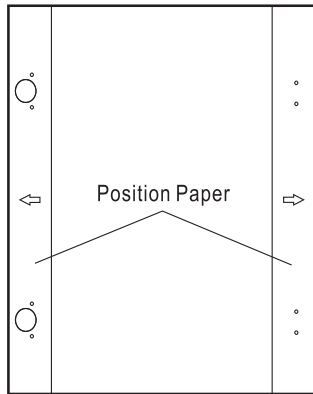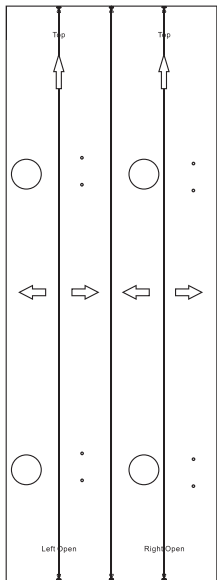



Fixed position paper on the door.

3

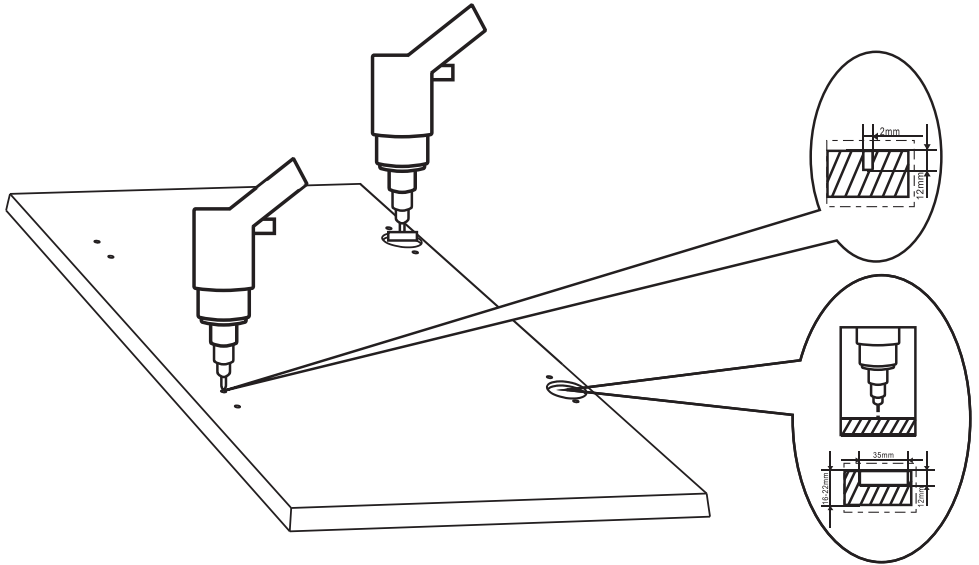


Drill hole on the door.

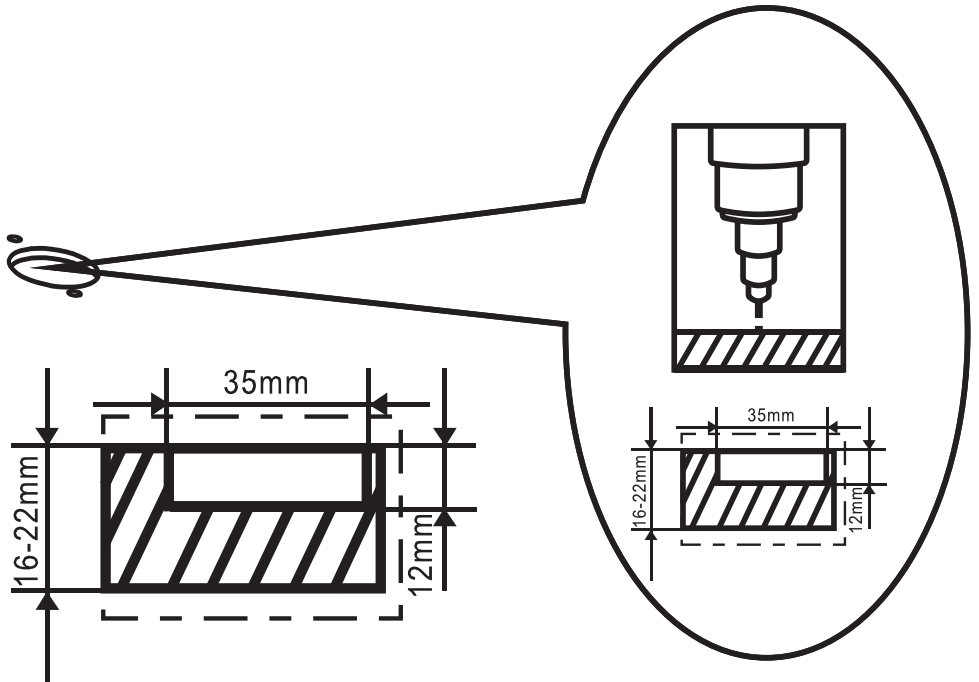

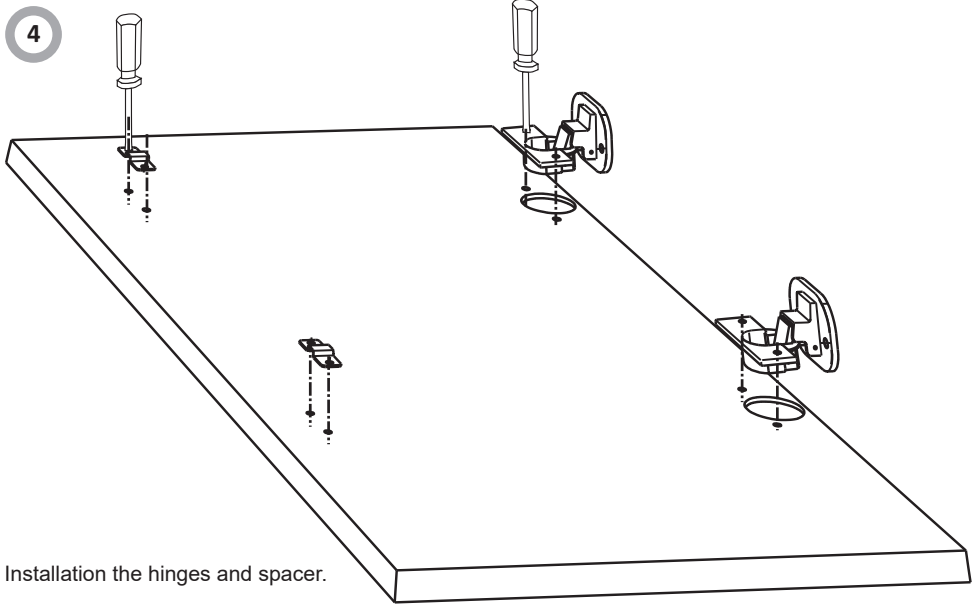


Installation the hinges and spacer.

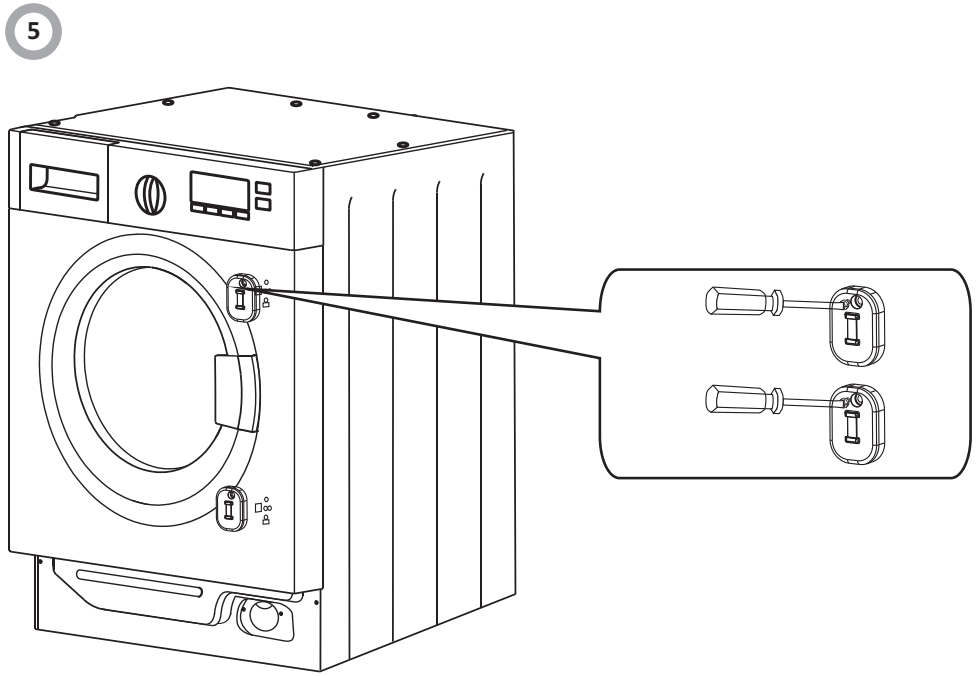

Installation the counter magnet.

6

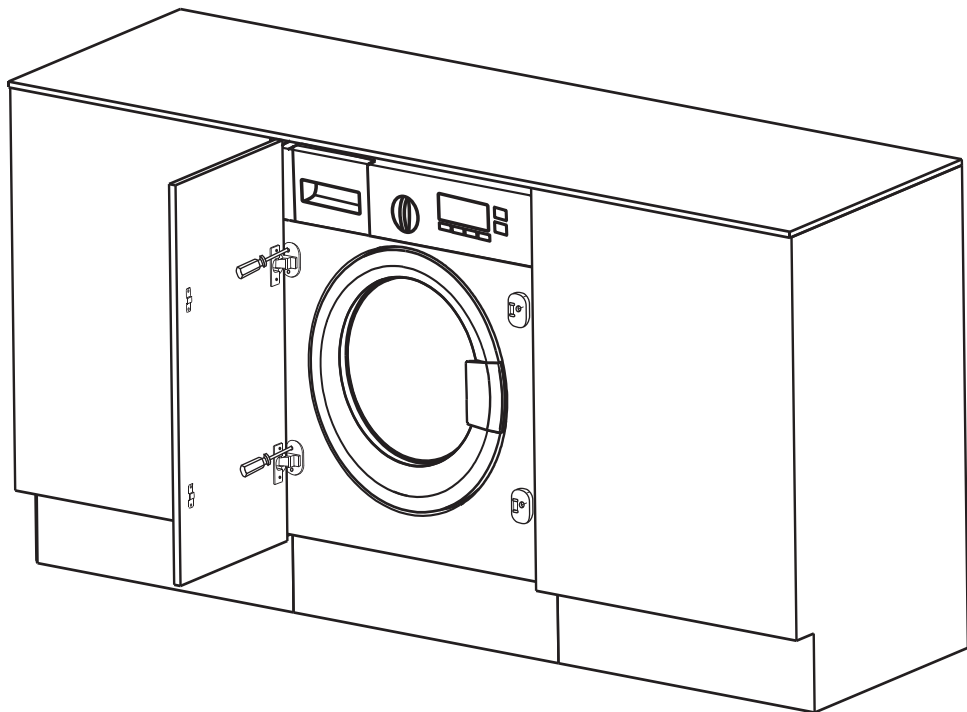

Installation the door.



Warning!

When installing the appliance into the kitchen ensure furniture, if possible, the hoses are placed in either of the two recesses on the back of the appliance.

This will help to prevent the hoses from becoming kinked or trapped.

WARNING: Maximum allowed mass of front furniture front panel is 7,5 kg.

For more information about the product, please refer to the EU EPREL Product Database at <https://eprel.ec.europa.eu>. For more information, please use your mobile device to scan the QR code on the energy label or enter the product model listed on the energy label in the EPREL search engine <https://eprel.ec.europa.eu/>

WARRANTY AND AFTER SALES SERVICE

Warranty

Warranty service as stated on the warranty card. The manufacturer shall not be held liable for any damage caused by improper use of the product.

Service

- The manufacturer recommends that all repairs and adjustments be carried out by the Factory Service Technician or the Manufacturer's Authorized Service Point. For safety reasons, repairs should be referred to professionals.
- Repairs carried out by unqualified persons may seriously endanger the appliance user.
- Pursuant to Commission Regulation (EU) 2019/2023, the minimum availability period for spare parts necessary to repair the appliance is 7 or 10 years depending on the type and purpose of the spare part.
- The list of spare parts and the ordering procedure are available on the websites of the manufacturer, importer or an authorized representative.
- The minimum warranty period for the appliance offered by the manufacturer, importer or authorized representative is given in the warranty card.
- The warranty shall be void if you make any independent adaptations or alterations, tamper with seals or other appliance safety devices or its parts or interfere with the appliance contrary to operating instructions.

In the event of appliance malfunction, request assistance or repair.

If your appliance needs repair, please contact the service centre. Please see warranty card for address and contact details of our service centre. Before contacting us, please have ready the appliance serial number, which can be found on the identification sticker: For your convenience, please write it down below:

| | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|



Amica

 Service Help Line

For the UK: please call
01949 862012

For Ireland: please call
0818 46 46 46 (non-geographic number)
or **01 88 2010** (standard rate call)