



AWDI814D

OPERATING INSTRUCTIONS

WASHER DRYER

Please carefully read these Operating Instructions before using the appliance!

CONTENTS

Basic Information.....3

Safety instructions.....4

Install the appliance.....8

Understanding the symbols on clothes labels.....10

Description of the appliance.....10

Description of control panel.....11

Using the appliance.....16

Special programmes.....17

Table of programmes.....18

Troubleshooting.....19

Maintenance and Cleaning.....20

Practical tips on washing.....21

Specification.....24

Service and Warranty.....24

Product Fiche.....25



In accordance with European Directive **2012/19/UE** and Polish legislation regarding used electrical and electronic goods, this appliance is marked with the symbol of the crossed-out waste container.

This marking indicates that the appliance must not be disposed of together with other household waste after it has been used.

The user is obliged to hand it over to waste collection centre collecting used electrical and electronic goods. The collectors, including local collection points, shops and local authority departments provide recycling schemes. Proper handling of used electrical and electronic goods helps avoid environmental and health hazards resulting from the presence of dangerous components and the inappropriate storage and processing of such goods.

BASIC INFORMATION

Dear customer,

From today, washing will be easier than ever before. Your Amica washer-dryer is exceptionally easy to use and extremely efficient. After reading these Operating Instructions, operating the appliance will be easy. Before being packaged and leaving the manufacturer, the appliance was thoroughly checked with regard to safety and functionality. After these tests some moisture or water may remain in the appliance. Before using the appliance, please read these Operating Instructions carefully. Following the directions in this manual will ensure proper operation and safe use of the appliance. It is important to keep these Operating Instructions and store them in a safe place so that they can be consulted at any time. Follow these instructions carefully in order to avoid possible accidents.



Important!

This washer-dryer is intended for domestic use only to wash textiles and clothes designed to be machine washed in a detergent bath.

Before plugging the washer-dryer into the mains, remove the safety packaging and ensure the machine is level. Description of the appliance in these operating instructions was based on technical data known on the date this document was published.

The manufacturer reserves the right to introduce changes, which do not affect operation of the appliance.

Use

- Carefully read the instructions below before using the appliance.
- Never use the appliance outdoors or anywhere the temperature may fall below freezing.
- The appliance should not be operated by children or anyone who has not read the instructions.

Important! Temperatures below 0°C can damage the appliance!

In the event of the appliance being stored or transported in sub-zero temperatures, it should be left to acclimatise in a temperature above zero for 8 hours before being used.

Manufacturer's Declaration

The manufacturer hereby declares that this product meets the requirements of the following European directives:

- Low Voltage Directive **2014/35/EC**,
- Electromagnetic Compatibility (EMC) Directive **2014/30/EC**,

and has been marked with the **CE** symbol and issued with a declaration of compliance made available to market regulators.


NOTES ON SAFETY

- Detergents Use only those detergents and additives which are designed for automatic washing machines, especially when using the **COTTON 90°C** programme.

Do not use any agents containing solvents, as these may damage certain parts of the appliance, or cause them to emit poisonous gases. There is also a risk of ignition and explosion.

- Load Washing Ensure no unwanted objects are placed inside the appliance. Completely empty all pockets in clothing to be washed and fasten buttons and zips. Place small, loose objects in a washing bag, or inside a pillow case, as they may be destroyed or else damage the drum or internal tank. Do not exceed the recommended maximum load of washing.

- Control Panel

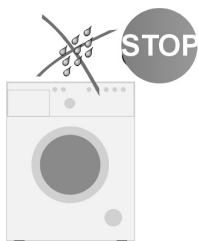

Protect the control panel from water spillage.

Do not put washed clothes on top of the appliance!

NOTES ON SAFETY

- Transport Unplug the appliance before preparing it for transport. Do not transport the washer-dryer if drum locking bolts are not in place. See the chapter INSTALL THE APPLIANCE (page 8). Keep the appliance in upright position when transported.
- Data plate Data plate indicating basic information about the washer-dryer is located at the top part of the rear casing.

- Dry

Do not dry clothes that have not been washed.

- Do not dry chemically washed garments or clothing, where stains were removed by chemicals.
- Do not dry clothes soiled with substances such as cooking oil, crude oil, acetone, alcohol, petrol, kerosene, stain removers, turpentine, wax.
- Before loading the clothes into the dryer, remove such contamination in hot water, using a large amount of washing detergent.
- Do not dry articles made of rubber foam, latex, water-resistant fabrics, raincoats, rubber mats, thermally formed products, clothing or pillows padded with foam rubber, as they may melt and damage other items or even damage the appliance. Please carefully read these operating instruction before installing the appliance. Damage caused by improper connections or use of the appliance is not covered by the warranty.

NOTE: There is a cooling phase at the end of the drying cycle. Therefore, do not turn off the appliance before the end of the drying cycle. Otherwise, quickly remove and hang clothes to cool.

Checking stability

Once the appliance is in position and levelled, it must be checked to ensure it rests firmly on all four legs.

In order to check this, press down each corner of the appliance in turn to see if it moves. Safe, long-term and reliable operation of the appliance depends on it being correctly positioned and level.

Important! Level the appliance,
remove the drum locking bolts and wait 3 hours
before using the appliance for the first time.

Important! Incorrect levelling,
especially instability, may cause the to
move around during operation.

This appliance can be used by children aged 8 years and older or by persons with physical, mental or sensory handicaps, or by those who are inexperienced or unfamiliar with the appliance, provided they are supervised or have been instructed how to safely use the appliance and are familiar with risks associated with the use of the appliance.

Ensure that children do not play with the appliance.

Cleaning and maintenance of the appliance should not be performed by children unless they are 8 years or older and are supervised by a competent person.

Children of less than 3 years should be kept away unless continuously supervised.


DISPOSAL OF THE APPLIANCE

To ensure safety, the washing machine must be rendered unsuitable for use once its useful life comes to an end.


First unplug it and then cut off the power lead. Scrap the appliance in line with local waste disposal legislation.

INSTALL THE APPLIANCE

I. Remove the transport protection (keep the locking bolts for future use, e.g. when moving house).

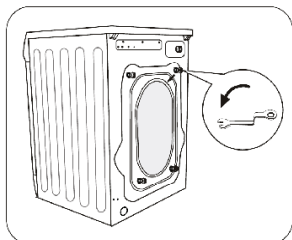

- Unscrew the 4 locking bolts with a spanner.
- Remove the rubber and plastic transport brackets from the sockets along with the washers and bolts.

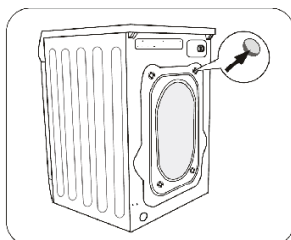

- Stop up the holes with the stoppers enclosed in the accessories bag.




The locking bolts **MUST** be removed before the appliance is used!

II. Positioning and levelling the appliance



- Do not place the appliance on a carpet!
- The floor surface should not be either concave or sloping!
- Attention should be paid to the shape of the surface of the floor, so that the entire weight of the appliance rests on its legs (not its body)!

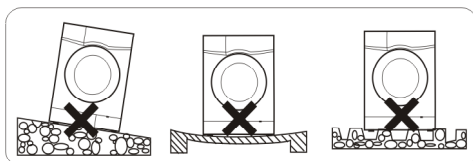



- Place the appliance on a solid, even surface.
- Level the machine by adjusting the legs.



After positioning and levelling the appliance, check that it is stable by pressing down each corner and ensuring it does not move!




You can adjust the balance of your machine by the adjustable foot.

- Loosen the plastic adjustment nut.
- Adjust the feet upward and downward by rotating them.
- Tighten the plastic adjustment nut after balance is achieved.

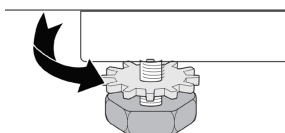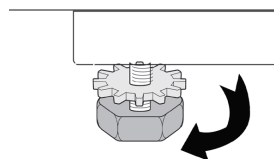

INSTALL THE APPLIANCE

III. Connecting the water supply

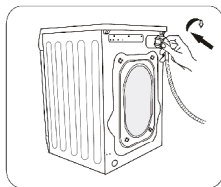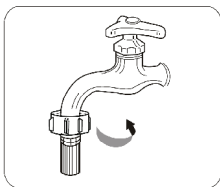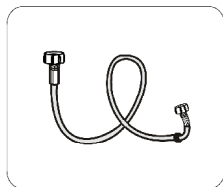

Use the new hoses supplied with the machine.
Do not re-use hoses.

A supply hose with seals is inside the drum of the machine.




Ciśnienie wody min. 0,1 MPa (1 bar), max.1 MPa (10 bar).

Supply the machine with cold water


- after connecting, make sure the hose is not twisted
- after connecting the hose and the valve, check they are sealed tight
- regularly check the condition of the supply hose.

IV. Water drain


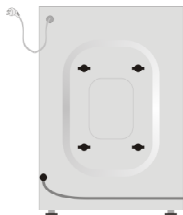


max 100 cm
min 60 cm

The drain hose is at the back of the machine. Fix the drain hose so that it does not move while the appliance is in operation (use the elbow as shown below). Do not place the hose too deep into the outlet pipe!

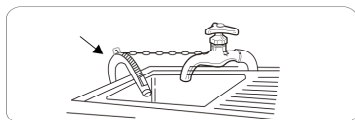


V. Connecting to power supply

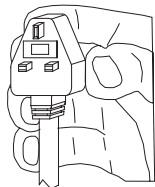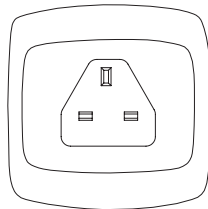



- The appliance's mains connection (electrical wall socket) should be in a visible and accessible place!
- Only plug the appliance into a properly installed socket with an earth pin!
- Do not connect to an adaptor or an extension cord!
- In the event of the power lead being damaged, it must be replaced by an authorised technician.
- The electrical system to which the appliance is to be connected must be protected with a 10 A fuse.


UNDERSTANDING THE SYMBOLS ON CLOTHES LABELS


I. Washing



boil at 90°C


wash at 60° C


wash at 40° C


DO NOT wash!


delicate


handwash

II. Chemical cleaning



all solvents



all except TRI



petrol only



DO NOT dry clean!

III. Tumble Dryer


normal


low


high


DO NOT dry!

IV. Ironing


110°C


150°C



200°C


DO NOT iron!




Always pay attention to the symbols on garments' labels when choosing a washing setting.

DESCRIPTION OF THE APPLIANCE

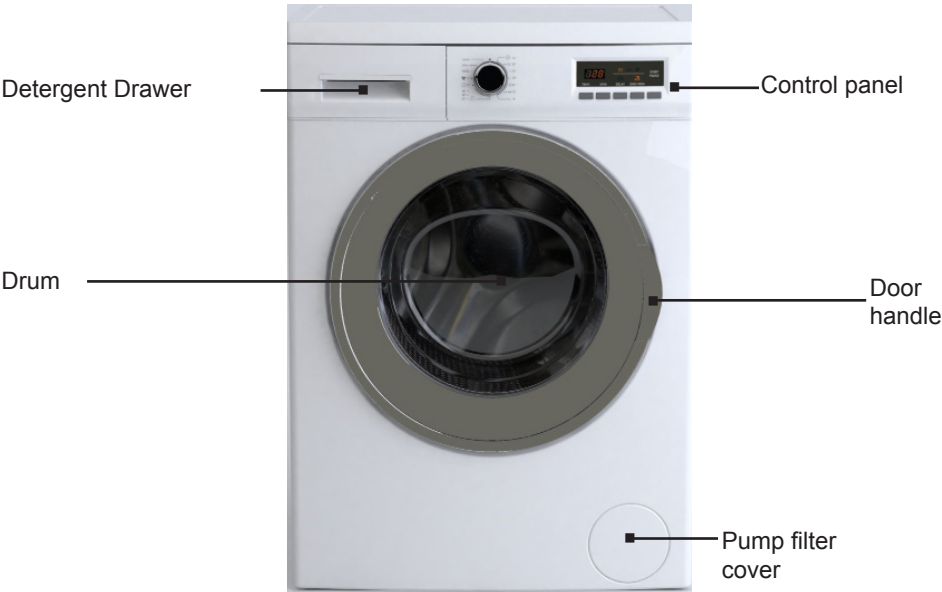


DESCRIPTION OF CONTROL PANEL

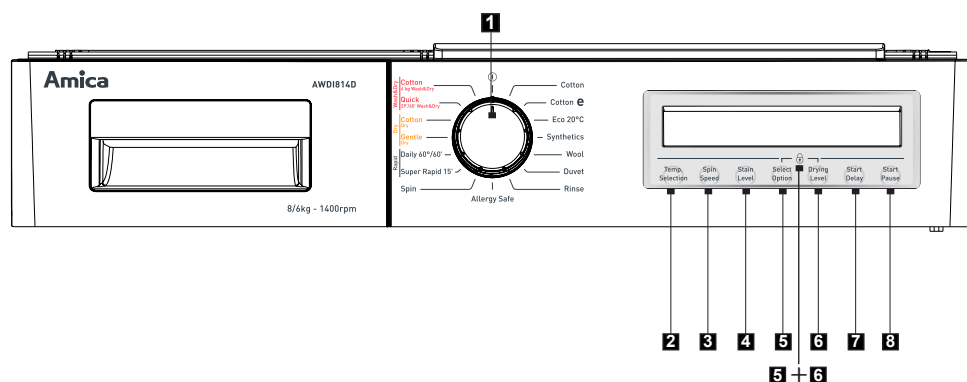

1. **Programme selection knob**
 2. **Temperature Selection button**
 3. **Spin speed selection button**
 4. **Stain Level selection button**
 5. **Select Option (Pre-wash/Extra Rinse) button**
 6. **Drying Level selection button**
 7. **Start Delay selection button**
 8. **START/PAUSE selection button**
- 5+6 Child Lock

1. Programme selector knob

Choose the appropriate wash, washing-dry, dry programme as required, depending on the degree of soil, and type and amount of laundry loaded, which ensures better results and more effective washing and/or drying. Once the wash programme is started, turning the programme selector knob to another position (except  — reset programme) does not change the previously selected programme.

2. Temperature selector button

This button allows the washing temperature to be set. Press this button to display water temperature settings available for a given programme or an option for washing in cold water (no heating). Depending on the selected programme, the display shows the following temperatures: --°C (cold water) -30°C-40°C-50°C-60°C-70°C-80°C-90°C. For the Eco programme you can select the cold water option or 20°C on the display.

3. Spin speed selector button

Press this button to set the spin speed when water is being pumped out of the washing machine. Press the button to change the setting. Depending on the programme selected, the display shows the following values: -- (spin off) - 400 - 600 - 1000 - 1200 - 1400.

DESCRIPTION OF CONTROL PANEL

4. Soil Level selector button



Level 1 - for lightly soiled clothing. Compared to level 2 (standard), the appliance takes approximately 8% less water, the duration of the washing phase is approximately 10 min. shorter, the temperature setting is not changed.



Level 2 - standard spin speed, designed for washing medium soiled clothing. Default programme values are applied.



Level 3 - for heavily soiled clothing. Compared to level 2 (standard), the appliance takes the same amount of water, the duration of the washing phase is approximately 10 min. longer, the temperature setting is not changed.

| Programmes | Soil level | Default setting | Available levels | |
|-------------------|------------|-----------------|------------------|---------|
| Cotton | Option | Level 2 | Level 3 | Level 1 |
| Cotton Eco | Option | Level 2 | Level 3 | Level 1 |
| *Cotton 60 e | Option | Level 2 | Level 3 | Level 1 |
| *Cotton 40 e | Option | Level 2 | Level 3 | Level 1 |
| Eco 20 | - | Level 1 | - | - |
| Synthetics | Option | Level 2 | Level 3 | Level 1 |
| Wool | Option | Level 1 | Level 2 | Level 3 |
| Duvet | Option | Level 1 | Level 2 | Level 3 |
| Rinse | - | Level 1 | - | - |
| Antiallergic | Option | Level 1 | Level 2 | Level 3 |
| Spin | - | Level 1 | - | - |
| Rapid 15' | - | Level 1 | - | - |
| Daily 60' | Option | Level 2 | Level 1 | - |
| Gentle Dry | - | Level 1 | - | - |
| Cotton Dry | - | Level 1 | - | - |
| Quick Wash & Dry | - | Level 1 | - | - |
| Cotton Wash & Dry | - | Level 1 | - | - |

DESCRIPTION OF CONTROL PANEL

5. Pre-wash selector button / Extra Rinse selector button

a). The **Pre-wash** function is not available for all programmes (see Table of wash programmes).

 

The **Pre-wash** function extends the wash cycle by approximately 25 minutes. The laundry is prewashed before the main wash cycle begins. Use the **Pre-wash** to achieve excellent washing results without the need to soak the laundry. Pre-wash is recommended when washing heavily soiled laundry. Pre-wash will be performed at 30°C.


Note! Pour suitable detergent to detergent drawer marked with “1” symbol before the **Pre-wash** function is activated.

b). Extra Rinse

The function is especially useful when washing underwear and also clothes for people with sensitive skin. If you select this function, there will be 1, 2 or 3 extra rinses depending on customer's preferences, achieving better rinsing results.

c). The **Allergy Safe** programme is especially recommended for washing children's clothing and for people with sensitive skin. Select this option to add an extra rinse to wash cycle. Additionally, during all stages of rinsing water is heated to 30°C.

● Touch the  symbol button until you see the  symbol to activate the anti-allergic additional function.

Note: If the  symbol is not displayed on the screen when you want to select the anti-allergic additional function, it means that the washing programme you selected does not use this feature.

DESCRIPTION OF CONTROL PANEL

6. Dry level selector button

When you select the drying time the appliance will dry the laundry with hot air at the end of the washing phase. Select the drying time by pressing the button repeatedly. The time depends on the amount of the laundry, type of fabric and moisture content.

- You can select the drying level you desire by touching the drying level selection button.
- Level 1 “|||”, Level 2 “||||”, Level 3 “|||||” symbols shall be displayed on the display of your appliance when you press the drying level button.
- Level 1 “|||” : Recommended for laundry that will be ironed before using.
If you would like to select the “|||” feature, press the drying level button until you see the “|||” symbol on the display.
- Level 2 “||||” : Recommended for laundry that requires hanger drying.
If you would like to select the “||||” drying feature, press the drying level button until you see the “||||” symbol on the display.
- Level 3 “|||||” : Recommended for laundry that will be folded and put to the wardrobe after the end of the program. If you would like to select the “|||||” drying feature, press the drying level button until you see the “|||||” symbol on the display.

Note: If no change occurs when you touch the drying level button, this means there is no drying level selection in the programme you have selected.

If you want to apply duration drying to your laundry at the end of the washing;

- You can select the drying duration you want by touching the level-drying button.
- When you touch the level-drying button, the screen of your machine will display level 1 “|||”, level 2 “||||”, level 3 “|||||” symbols.

If you keep touching you will see the duration-drying (30 mins, 60 mins, 120 mins) options on the screen. You can select the drying duration you desire.

Note: If the 30 mins, 60 mins, 120 mins durations do not appear on the screen when you want to select the duration drying feature, it means this drying feature is not used for the washing program You have selected.

DESCRIPTION OF CONTROL PANEL

7. Delay Start button

Start Delay specifies the delay in hours until the programme will start. You can delay the wash cycle by 0,5-23 hours. Press and hold the button to set the time after which washing is to commence. Delay Start Indicator will flash until the programme starts.

8. START/PAUSE button

Press Start/Pause to start or pause a programme. When paused, the Start/Pause indicator starts to flash.

The **Pause** mode can be used to soak the laundry.

Once the selected programme started wait for about 10 minutes and then press the **START/PAUSE** button. When the laundry is soaked as required, press the **Start/Pause** button again to resume the program. Soaking will improve washing results for heavily soiled laundry.

You can **Pause** a programme to add laundry to the drum during the wash cycle. Press the **Start/Pause** button to add laundry to the drum during the wash cycle. After adding laundry close the door and press the Start/Pause button. The appliance will resume a wash programme.

Note: If you press the Start/Pause button and the door remains locked, it means the laundry cannot be added at this stage of the programme.

5+6. Child Lock

This function locks function buttons to prevent settings being changed or operation interrupted by children. The function is activated by simultaneously pressing and holding buttons (Option) and (Dry Level) for approx. 5 seconds (the display will show an indicator by the symbol and CL symbol will flash). To release the Child Lock, hold the same buttons down once more for around 5 seconds.

NOTE: Turning off or unplugging the washing machine does not deactivate the Child Lock.

NOTE: If you press any button or change the position of the selector knob, the CL symbol will flash.

USING THE APPLIANCE


I. Select Programme

1. Set the programme selector knob to the desired programme (see the table further on).
2. Change temperature, spin speed or activate available additional functions to modify the programme to your individual needs.
3. Press the [Start/ Pause] button once door lock is engaged, the programme will start after about 6 seconds.


II. Start delay setting

The delayed start function may be used when, for example, taking advantage of discounted energy tariffs.


Procedure:

1. Close the door.
2. Set the programme selector knob to the desired programme (see the table further on).
3. Select additional functions and wash or/and dry cycle parameters as required.
4. Press the Delay Start button .
5. Select the wash cycle time 0,5-23h.
6. Press the [Start/ Pause] button. The appliance will be set in delay mode.
Washing will commence immediately after the delay time has elapsed.

III. End of the wash cycle

1. The **END** indicator will flash when the wash cycle completes.
2. Turn off the water valve
3. Set the programme selection knob to .
4. Unplug the appliance from the mains.
5. Open the door and remove laundry.

IV. Cancelling and changing programme

Set the programme selector knob to  position for several seconds to terminate a programme. Then select the desired wash programme.

SPECIAL PROGRAMS

1. **The Allergy Safe programme**

This programme is designed for washing clothes of children and people with sensitive skin. Main wash is carried out at a temperature of 60°C (temperature setting: 60/50/40/30/- - „cold water”), followed by four rinses.

Additionally, during all stages of rinsing water is heated to 30°C.

2. **Daily 60’:**

A daily wash programme with a duration of 60 minutes, the temperature setting of 60°C and a single rinse cycle and a maximum spin speed. Use this programme to wash coloured fabrics, cotton and linen. It is recommended to select Extra Rinse and use less detergent to avoid staining.

3. **Rapid 15’:**

Use these programmes to refresh clothes. They include all three wash stages:

-main wash

-rinse

-spin

4. **Eco 20 programme:**

Use this programme to wash clothes at 20°C.

TABLE OF PROGRAMMES

| Programme name | Max. temp. °C | Max. spin speed (rpm) | Max. load washing [kg] | Max. load drying [kg] | Additional functions available | | | | Detergent drawer | | | Time [h:mm] | Energy consumption [kWh] | Water consumption [l] | Number of rinses | Type of laundry |
|-------------------|---------------|-----------------------|------------------------|-----------------------|--------------------------------|--------------|-------------|---------------|------------------|---------------|-----------------|-------------|--------------------------|-----------------------|------------------|--|
| | | | | | Prewash | Allegry Save | Extra rinse | Delayed start | Prewash I | Basic wash II | Fabric softener | | | | | |
| Cotton 90 | 90° | 1400 | 8.0 | 6.0 | Option | Option | Option | Option | X | ● | ○ | 3:12 | 2.40 | 87 | 3 | Very dry white cotton and linen. |
| Cotton Eco 60e | 60° | 1400 | 8.0 | 6.0 | Option | Option | Option | Option | X | ● | ○ | 3:40 | 1.06 | 57 | 2 | Moderately or heavily soiled cotton clothes, bed linen, table linen, towels. |
| Cotton Eco 60i | 60° | 1400 | 8.0 | 6.0 | Option | Option | Option | Option | X | ● | ○ | 2:00 | 1.25 | 62 | 2 | Lightly soiled cotton or linen clothes. |
| Cotton Eco 40e | 40° | 1400 | 8.0 | 6.0 | Option | Option | Option | Option | X | ● | ○ | 3:05 | 0.85 | 57 | 2 | Moderately soiled cotton or linen clothes. |
| Cotton Eco 40i | 40° | 1400 | 8.0 | 6.0 | Option | Option | Option | Option | X | ● | ○ | 1:55 | 1.18 | 62 | 2 | Lightly soiled cotton or linen clothes. |
| Eco 20 | 20° | 1400 | 4.0 | 4.0 | Option | - | Option | Option | X | ● | ○ | 1:45 | 0.22 | 46 | 2 | Lightly soiled, sweaty cotton and linen clothes. Wash at 20°C. |
| Synthetics | 40° | 800 | 3.5 | 3.5 | Option | Option | Option | Option | ○ | ● | ○ | 2:02 | 0.80 | 50 | 2 | Moderately soiled fabrics: synthetics, or synthetics and cotton combinations, or mixtures and cotton combinations. |
| Wool | 30° | 600 | - | 2.5 | - | - | - | Option | X | ● | ○ | 0:55 | 0.18 | 58 | 3 | The wool programme is ideal for delicate fabrics. Do not machine wash woollen fabrics if the colour tag prohibits. |
| Duvet | 40° | 800 | - | 2.5 | - | - | - | Option | X | ● | ○ | 1:45 | 0.50 | 70 | 2 | The programme is designed for washing duvet. |
| Revue | - | 1400 | 8.0 | 6.0 | - | - | Option | Option | X | X | ○ | 0:50 | 0.10 | 45 | 2 | This programme is for rinsing with additives (such as anti-static or softening additives). Reduce the spin speed when washing very delicate fabrics. |
| Allegry Safe | 60° | 800 | 4.0 | 4.0 | Option | Option | Option | Option | X | ● | ○ | 3:02 | 2.17 | 93 | 4 | The program is designed for washing clothes of people with sensitive skin, for delicate fabrics. |
| Spin | - | 1400 | 8.0 | 6.0 | Option | - | - | - | X | X | X | 0:20 | 0.08 | - | - | Spin-drying after hand washing. |
| Rapid 15° | 30° | 800 | 2.0 | 2.0 | - | - | - | Option | X | ● | X | 0:15 | 0.10 | 45 | 2 | Lightly soiled, sweaty cotton clothes and linen. |
| Daily 60° | 60° | 1400 | 4.0 | 4.0 | Option | - | - | Option | X | ● | X | 0:00 | 0.05 | 36 | 1 | Dry cotton, coloured laundry, linen fabrics. |
| Gentle Dry | - | - | - | 3.5 | - | - | - | - | - | - | - | 3:17 | 1.20 | 10 | 2 | The programme is designed for drying delicate fabrics. |
| Cotton Dry | - | - | - | 6.0 | - | - | - | - | - | - | - | 1:40 | 2.31 | 26 | 2 | The programme is designed for drying cotton laundry. |
| Quick Wash Dry | 30° | 800 | - | - | - | - | - | - | X | ● | ○ | 0:33 | 0.54 | 26 | 1 | The programme is designed for quick washing and drying of small amount of laundry weighing up to 0.5 kg (1e. 3.5 lbs). |
| Cotton Wash & Dry | 60° | 1400 | - | - | - | - | - | - | X | ● | ○ | 4:45 | 4.30 | 100 | 3 | The programme is designed for washing and drying cotton laundry. |

Use detergent or fabric softener if necessary.

Detergent required, without which washing will be ineffective

Do not use detergent or fabric softener

- Use detergent or fabric softener if necessary.
- Detergent required, without which washing will be ineffective
- Do not use detergent or fabric softener

NOTE: Time given in the table is an estimate only. It can differ from the actual washing time depending on temperature, water pressure and quantity of laundry loaded. The time is automatically updated during the wash cycle and it is normal for it to stop or skip.

*** - standard programmes for washing cotton fabrics at 60°C.**
This programme is suitable for washing normally soiled cotton fabrics. This is the most effective programme for washing these type of fabrics, taking into account the total energy and water consumption.
Note: Real water temperature may differ from the declared wash cycle temperature.

**** - standard programmes for drying cotton fabrics.**

TROUBLESHOOTING

| Problem | Probable cause/Solution |
|---|--|
| The washing machine is not working | <ul style="list-style-type: none"> - Turn the tap on - Clean the mesh filter on the supply hose - Close the door - Press the [Start/ Pause] button |
| Water leaks | <ul style="list-style-type: none"> - Properly connect the water intake. |
| The load in the appliance has not been spun | <ul style="list-style-type: none"> - Replace the load evenly in the drum, clean the pump filter. |
| Unpleasant smell in the drum | <ul style="list-style-type: none"> - Run a hot wash cycle with detergent and no load |
| No water in the drum | <ul style="list-style-type: none"> - Turn on the water supply tap. |
| There is water left in the fabric softener container. | <ul style="list-style-type: none"> - Firmly press the button in the middle compartment |
| Washing not properly rinsed | <ul style="list-style-type: none"> - Add correct amount of detergent,, depending on how dirty the washing is and the hardness of the water (see the instructions on the detergent's packaging). - Clean the pump filter |
| The appliance does not fill with water | <ul style="list-style-type: none"> - Turn on the water valve - Check the programme setting - Check the water pressure - Reconnect the water supply hose. - Close the door - Check the water intake is not bent or blocked |
| Simultaneous intake and draining of water. | <ul style="list-style-type: none"> - Check that the end of the drain hose is higher than the level of the water in the appliance (the hose should be at a height of 0.6m-1m) |
| Water does not drain properly | <ul style="list-style-type: none"> - Check the pump filter - Check the drain hose - Check the height of the drain hose, which should be 0.6-1 m from the bottom of the appliance. |
| Appliance vibrating | <ul style="list-style-type: none"> - Check the transport safety devices have been removed - Level the appliance - Secure the legs (tighten the nuts) |
| Foam from the detergent drawer. | <ul style="list-style-type: none"> - Reduce the amount of detergent used - Check the water hardness and amount of detergent used, as well as the does of detergent used in the drum |
| The operation of the appliance is interrupted before the programme has finished | <ul style="list-style-type: none"> - Check power supply, water supply and water outlet |
| Noise caused by operation of the outlet pump after water is removed | <ul style="list-style-type: none"> - The water has been removed from the drum, but small amounts remain in the pump and outlet lead Constant operation of the outlet pump causes air to be sucked in leading to the characteristic noise, which does not mean that anything is wrong. |
| Short breaks during the wash cycle | <ul style="list-style-type: none"> - The water in the appliance is being automatically refilled - Pause caused by removal of excess foam |
| The laundry is not dried or poorly dried | <ul style="list-style-type: none"> - too big a load — reduce the load in accordance with the table - wait for about 15 minutes and resume drying |

MAINTENANCE AND CLEANING




Never clean the product's casing or plastic parts using solvents or strong, abrasive cleaning agents (e.g. washing powders or creams)! Only use delicate liquid cleaning agents and soft cloths. Do not use sponges.

Clean the pump filter every 20 washes or so.

Neglecting to clean the filter causes difficulties in emptying the machine of water!

I. Cleaning the pump filter

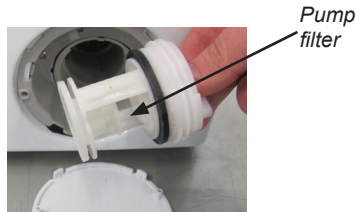

- Unplug the appliance from the mains,
- Turn off the water valve,
- Open the filter cover by hand or using a flat-head screwdriver.

- Unscrew the filter.

- Remove and clean the filter.



To replace the filter following the procedure in reverse order.

II. Cleaning the water supply valve



- Turn on the water supply hose,
- Use forceps to grasp the filter mesh plunger,
- Remove and clean the filter (using a brush).



To replace the filter following the procedure in reverse order.

III. Cleaning the detergent drawer (at least once a month).



- Remove the drawer (while pressing the stop).

- Clean in running water (or using a brush or piece of cloth).
- Replace the drawer.

PRACTICAL TIPS ON WASHING

I. Detergents and laundry additives



It is recommended to use a general-purpose laundry detergent powder or liquid for the full range of temperatures according to the manufacturer's instructions on the detergent packaging.


Detergents

- Pour the detergent into the drawer compartment marked "2."
- Pour the pre-wash detergent into the drawer compartment marked "1."

Liquid detergents

- Install the supplied partition in the compartment "2" (figure below).
- Pour liquid detergent into the drawer compartment marked "2."

Fabric softeners added to the rinse

- Pour the fabric softener into the drawer compartment marked 
- Do not exceed the maximum level marked on the drawer compartment. This detergent will be used for the final rinse.



1  2



II. First wash



Before washing for the first time, put it through one high temperature cycle without a load, according to the following procedure:

- Connect the appliance to the wall power outlet
- Turn on the water valve
- Set the programme selector knob to high temperature wash.
- Add the appropriate detergent and press the [Start/ Pause] button.

III. Soil



Stubborn stains

Before washing garments, apply an additional stain remover according to the instructions for use.

Heavy soil:

- One-off washing of smaller amounts of clothes
- Add more detergent
- After washing heavily soiled clothes (e.g. working clothes) or garments which are shedding fibres, it is recommended that the appliance is rinsed out by running a programme cycle at a temperature of 60°C, without a load.

Light soil:

- See pt. "Conservation".

PRACTICAL TIPS ON WASHING

- IV. Conservation ➤➤ Reducing energy and water consumption. Garments which are only lightly soiled should be washed using the appropriate wash programme, i.e. **Cotton Eco**.
The appliance detects partial load. For partial load, when using the Express programme, the appliance will reduce water and energy consumption and shorten the wash cycle.
- V. Water hardness ➤➤ Hard water causes scale deposition.
Information about water hardness is available from the nearest water works.
It is advised that water softeners are used for every wash.
- VI. Power failure ➤➤ (loss of programme settings) Power outage or unplugging the appliance does not cancel the set programme. The programme memory is not volatile and the programme will continue once the power is restored. Do not open the appliance doors during a power outage.
- VII. Load ➤➤ Applies to washing machine:
Maximum drum capacity: 8 kg
Load the laundry into the drum according to the following instructions:
● cotton, towels – max full drum (do not force clothes into the drum as this will reduce the quality of the wash!).
● Synthetics - max 1/2 of the drum.
● wool, silk, delicate fabrics - max. approx. 1/3 of the drum.
- Important!** Do not overload the appliance! Overloading the appliance may damage the clothes being washed!
- The maximum load depending on the programme is presented in programme table.**
- Applies to dryer:
Maximum drum capacity: 6 kg

PRACTICAL TIPS ON WASHING

VIII. Load distribution control

➤ The electronic control panel contains a balance control system. Before spinning, this checks the distribution of clothes inside the drum.

In the event that too great an imbalance is discovered, it makes several attempts to rearrange the clothes inside the appliance. Sometimes these attempts may be insufficient to properly rearrange the clothes (in the case of towelling dressing gowns washed along with other types of garments, or sheets which have wrapped up in a ball with other items inside).

The system may then react in two ways:

- accept the uneven distribution of garments, but reduce spinning speed,
- decide that the garments are distributed too unevenly and not allow spinning.

In either case, after washing is finished open the appliance door, remove the washing by hand, close the door and select the spin setting again.

IX. Door Lock

➤ The appliance is equipped with a lock which prevents the door from being opened during wash cycle. Once a wash cycle is complete, the door lock is automatically released.

In order to open the door during the wash program, press Start/ Pause button and wait for the door to be unlocked.

NOTE 1: The door cannot be opened during some stages of the wash programme.

NOTE 2: If the temperature inside the drum is high, the door may remain locked until the water temperature has dropped below 60°C.

X. Delicate fabrics

➤ Programme:

- Select the appropriate wash programme (WOOL).

Load

Do not overload the appliance, max 1/3 of the drum, see Load

XI. Dosing

➤ According to the detergent manufacturer's instructions

Not enough detergent

- The washing turns grey
- Lumps of grease form, scale builds up

Too much detergent

- Strong foaming
- Ineffective washing, detergent incompletely rinsed from fabrics



SPECIFICATION

| | |
|---|--|
| -Type | AWDI814D |
| -Rated voltage | 220-240V / ~ 50Hz. |
| -Rated power | 2200 W |
| -Overcurrent protection | 10 A |
| -Drum capacity (washing) | max 8,0 kg |
| -Drum capacity (drying) | max 6,0 kg |
| -Water Pressure | min 0,1 MPa (1 bar), max 1 MPa (10 bar). |
| -Dimensions Depth/Height/Breadth [mm] | 845 x 597 x 582 |
| -Weight | 78 kg |
| Meets the requirements of EU legislation, EN 50229. standard. | |




For the UK: please call **0844 815 8880**
For Ireland: please call **0818 46 46 46**

PRODUCT FICHE

| | |
|--|---|
| The maximum load for washing (dry clothes) [kg] | 8.0 |
| The maximum load for drying [kg] | 6.0 |
| Spin speed [RPM] | 1400 |
| Number of programmes | 15 |
| Operating voltage [V] | 220-240V |
| Frequency [Hz] | ~50 Hz |
| Water pressure [MPa] | min. 0,1 MPa (1 bar), max.1 MPa (10 bar) |
| Dimensions (HxWxL) [mm] | 845x597x582 |
| Energy consumption (washing, spinning, drying) [kWh/cycle] | 5,44 kWh/cycle |
| Energy consumption (washing and spinning only) [kWh/cycle] | 1,06 kWh/cycle |
| Water consumption (washing, spinning, drying) [litres/cycle] | 112 l/cycle |
| Water consumption (washing and spinning only) [litres/cycle] | 56 l/cykl |
| Control programs according to: EN 50229 | |
| Wash cycle: Cotton Eco, load: 8 kg, temperature 60°C, spin speed: 1400 rpm | |
| Drying cycle: I. Drying programme for the first part of the load Programme: Cotton Dry, load:~4,0 kg (1 sheet +14 pillowcases) Option: Dry level 2 () II. Drying programme for the second part of the load Programme: Cotton Dry, load: ~4,0 kg (2 sheets + all towels) Option: Dry level 2 () | |

 * **Note:** Do not dry clothes that have not been washed.



Amica



For the UK: please call **0844 815 8880**

For Ireland: please call **0818 46 46 46**